


Control sheet of upper plug unit

Order n° Client : Date from the checking :

Denomination :

For 10 parts taken randomly, to make the different observations

- Upper plug unit width : Use the calliper square to measure LP
- Thickness of upper plug unit : Use the calliper square to measure E
- Colour
- Angle A
- Upper plug unit folds : check that the higher fold and the 3 folds forming the tube are made in the good direction. If we put the upper plug unit as on the drawing, the opening of the two external folds must be directed to the bottom and the opening of the interior fold must be directed upwards.

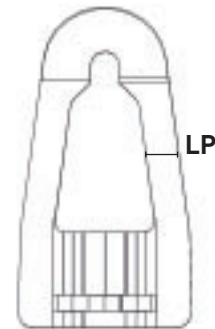

If one of the point is not correct, the sample must be removed. Target values on request

Remarks :

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

Checked by :